



4 Foot Wall Mount Kit

I-4WMK-T-BSS, I-4WMK-T-SB

4 Foot Kit Contains:

- 01 - 4' Base Rack Post (**A**)
- 11 - Bottle Brackets (Triple) (**B**)
- 09 - Hexagonal Bolt (**C**) and Receiver (**D**) Sets
- 03 - Mounting Screws (2-5/8") (**E**)
- 03 – Wall Spacers w/adhesive (**F**)
- 22 - Hole Plugs
- 02 - Plastic End Caps (**G**)
- 132 - Adjustable Grips*
- 02 - Hexagonal Wrenches
- 01 - Plastic Coupler (**H**)

Verify all materials are accounted for before starting

*Preinstalled on bottle brackets

Tools Needed:

- Power Drill w/Phillips Head (#3)
- 3/16th Drill Bit Attachments
- Level
- Pencil
- Measuring Tape
- Stud Finder (if necessary)

Contact Information

InVinity


Tel: 855-378-1004

Email: support@invinitywinerack.com

If you have any questions about installation and assembly, please feel free to contact us.

Wall Mount Installation Instructions:

1. Insert bolts into the holes along one side of the post, leaving the top, bottom, and middle (6th hole down) holes open. *Note: This side of the post will be the **BACK** and located against the wall when installing.*
2. Place receiver through bottle bracket and into post hole where bolt is located and use both hexagonal wrenches to tighten. Repeat this step for each bolt previously installed. *Note: Make sure the bottle bracket arm is in the correct position and forming a "U" shape.*
3. Choose location of rack to be installed and mark through the top hole on the wall with pencil. *Note: We recommend installing racks directly into wall studs or ¾" plywood. Dry wall anchors and screws may be used as well, but not recommended.*
4. Use power drill and drill bit to drill hole for top mounting screw.
5. Peel paper off of wall spacer. Align the hole in the wall spacer and top hole on the **back** of the post and press together. Repeat this step for the bottom and middle holes receiving mounting screws.
6. Insert mounting screw through the bottle bracket and then the post (top hole). Using power screw driver, secure mounting screw into pre-drilled hole into wall; do not fully tighten. *Note: Make sure the bottle bracket is in the correct position and the arm is forming a "U" shape.*

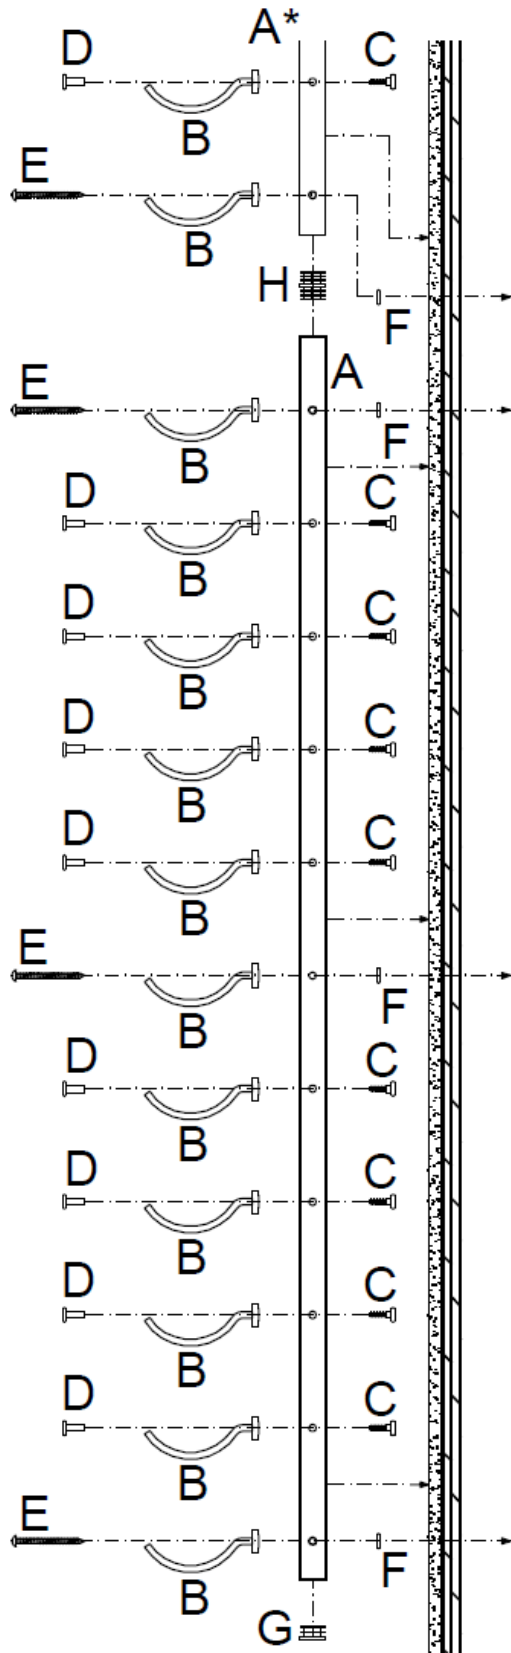

7. Plum post with level and mark wall at middle and bottom holes needing mounting screws. Move post and drill both holes in wall.

8. Insert mounting screw through the bottle bracket and then the post (bottom hole). Using power screwdriver, secure mounting screw into pre-drilled hole in wall. *Note: Make sure the bottle bracket is in the correct position and the arm is forming a "U" shape.*

9. Insert mounting screw through bracket and then the post (middle hole). Using power screwdriver, secure mounting screw into pre-drilled hole in wall.

10. Fully tighten top mounting screw to secure the post to the wall.

11. Insert the plastic hole caps into remaining unused holes on the sides of the post. Insert plastic end caps into top and bottom of the post.**

Please see our website for additional installation instructions, help, and design ideas.

** If combining two posts to form a six or seven foot wall mount rack, prepare both posts for wall assembly, install bottom rack first, and insert plastic coupler into top of bottom post. Then connect both posts using the coupler, plum the top post (**A***), and mark the holes to pre-drill for mounting screws. Remove top post, drill holes, reset top post into coupler, and secure top post to wall with mounting screws. End caps would only be located on bottom of bottom post and top of top post.

*** If installing multiple racks next to each other please allow for adequate space between the racks.

Warranty

InVinity strives for excellence and guarantees their products to be free of defects from the fabrication stage to everyday use. InVinity will, at its own discretion, replace any parts or products it has deemed defective. This warranty does not cover abuse, misuse, damage, or accident in the consumer's handling and moving of their products.